


Print check sheet

Confirm your printer is at 100% scale before you print on photo paper.

1. Print this page on ordinary A4 paper. In the print dialog choose 100% or Actual size.
2. Do NOT choose Fit to page, Shrink to fit or Scale to fit. That is what ruins photos.
3. Lay any bank card on the outline below. It should match on all four sides.

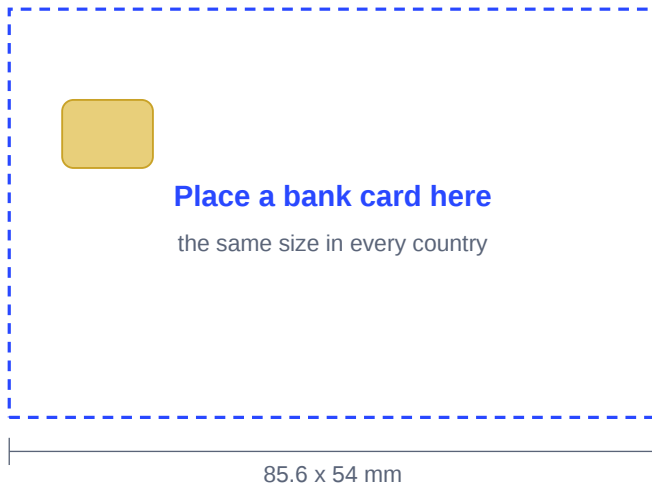

Any bank, credit or debit card.

They are all the same size:

85.60 x 53.98 mm, ISO/IEC 7810.


If the print matches your card,
your scale is correct.

Or measure this line. It is exactly 100 mm.



Common photo sizes, at their true size

Cut one out and hold it against a photo you already have.

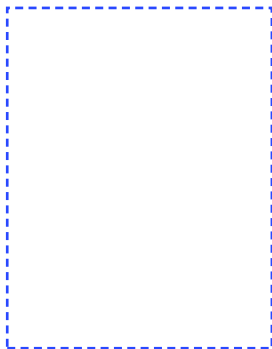

35 x 45 mm



2 x 2 in



50 x 70 mm

If the card matches

Your printer is set correctly. Use the same 100% setting when you print your photo sheet on photo paper.

Re-check after a driver update.

If it does not match

Reprint with Actual size selected. If it still will not match, your printer cannot hold scale. That is fine:

take the JPEG to any photo shop.